

HEATING & AIR CONDITIONING



American Standard[®] Link UX360 Thermostat User Guide



One System. Limitless Potential. Complete Control.

Model AHUI2360A200U

012-5063-01B-EN

Congratulations!

Introducing your new American Standard® Link system.*

Communicating technology enabling remote system monitoring and peace of mind.

This guide will introduce you to many of the features of your new American Standard Link system.

To enjoy the full benefits of your system, it should be connected to a American Standard Home account.

For online support go to www.asairhome.com. Scroll to the bottom of the page and select Help.

*SC360 System Controller (TSYS2C60A2VVU) is required.

Features Include:

- Wi-Fi Configuration for SC360
- Allergy Clean/Quick Clean Cycles

Auto Off

21%

- Humidity Sensor
- Programmable Scheduling
- One Touch Presets
- System Alerts
- Screen Saver
- Color Themes
- System Software Upgrades

70°

- Diagnostics
- Sensor Averaging

American Standard Home Benefits

The UX360 is designed to work in concert with American Standard Home to provide the convenience and advantages of a Smart Home.

Simplified Scheduling

Log into the American Standard Home website. Simply point and click and your customized schedule is set straight away.

Runtime History

Keep track of your system by downloading the cooling and heating system runtime history from American Standard Home.

Diagnostics

With your approval, Diagnostics allows your local dealer to remotely monitor your home's heating and cooling system using real-time performance data, ensuring you receive the highest possible level of Customer Service from American Standard and your American Standard Dealer. Ask your dealer about Diagnostics.


Contents

Home Screen 4
Menu5
Settings 6
Wireless Technician Access7
Thermostat Settings
Temperature Scale
Setpoint Deadband8
Indoor Sensor Calibration8
Screen Settings
Display9
Access Restrictions10
Weather 11
Current
5-dav Forecast
Postal Code11
Indoor Humidity 12
System Info 13
1-Touch Presets
Scheduling
Changing the Schedule 17
Adding Periods
Deleting Periods
Network Connection
Mobile App Registration
Bridge for Z-Wave® Devices
Adding/Removing Devices
Adding/Removing Devices
Advanced Bridge Settings
Other Features 28


American Standard Home Remote Climate Access is included with the purchase of American Standard smart connected controls. Up to eight American Standard smart controls, of any combination, may be connected to an American Standard Home account without a monthly service fee. Additional smart controls and home automation devices may require a monthly subscription for remote access via most web-enabled smartphones, tablets and computers. Internet service and American Standard Home registration required. Ask your American Standard dealer for details.

012-5063-01B-EN

Home Screen

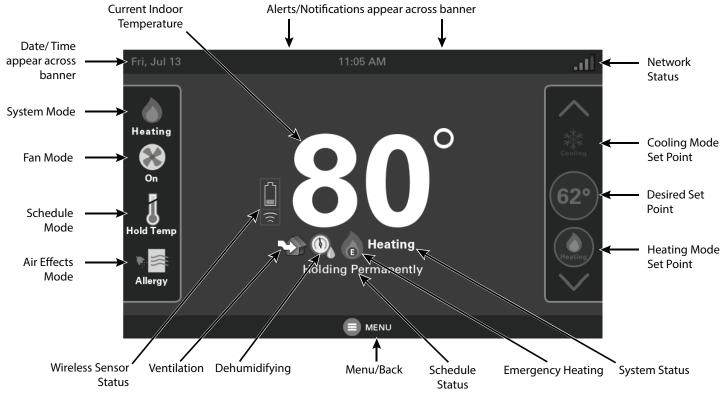


Menu

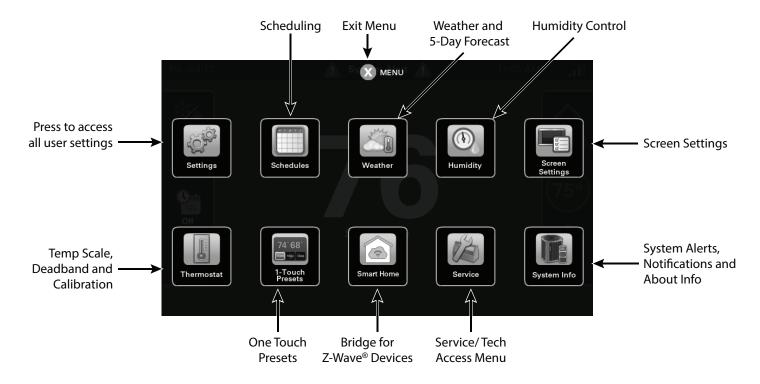


Settings

Navigate to Settings by selecting: Home Screen > Menu > Settings

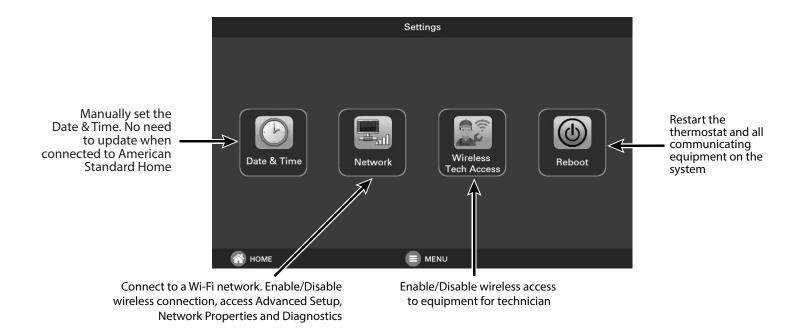

Wireless Technician Access

Wireless technician access allows the technician to wirelessly connect to the communicating equipment on the system.

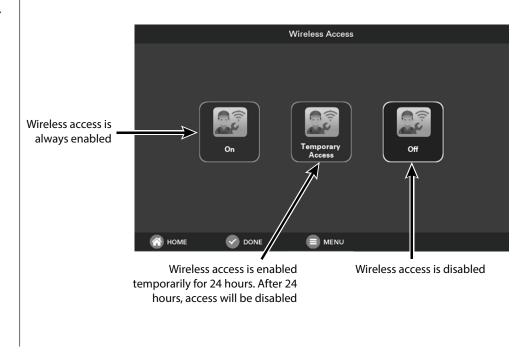


Thermostat Settings

Navigate to Thermostat Settings by selecting: Home Screen > Menu > Thermostat

Temperature Scale

	Thermostat Settings	
Temperature Scale Setpoint Deadband Inducer Calibration	Unit Display Solution-theregonative and you would a constitution of the solution the address the source start of calay the agreed and induces sone and induces the agreed and induces sone and induces	remp Scale F C
💮 номе		

Setpoint Deadband

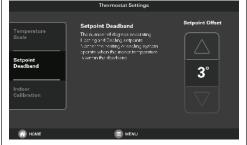

Indoor Sensor Calibration

	Thermostat Setting	gs	
Temperature Scale Setpoint Deadband Indeor Calibration	Indoor calibration settings are disabled while the thermostartia most an assigned sensor. Place reach out to your disafer to assign this thermometat as an indoor sensor.	Indoor Temp	Humidity
💮 номе	E MENU		

NOTE: Indoor sensor calibration settings are disabled when the thermostat is not enabled as an indoor sensor. Please contact your dealer for help.

Screen Settings

Display

Navigate to **Display** Settings by selecting: Home Screen > Menu > Screen Settings > Display

Select your preferred display brightness, backlight, screen saver and color theme settings and press **Done**.

Brightness



Backlight



Screen Saver

	Disp	lay	
Brightness Backlight Screen Saver Color Themes	Screen Saver; He scree w shy ar out ng until custer;	Weit Durstion	Screen Saver None Black Indoor Temperature
🚳 номе 🛛		MENU	

Color Themes




Screen Settings (Cont.)

Access Restrictions

Navigate to Access Restrictions by selecting: Home Screen > Menu > Screen Settings > Access Restrictions

The UX360 features several levels to restrict access to functionality. Select the desired level of access restriction and select **Done**. Applying an access restriction will cause the screen to lock when inactive for one minute.

Restriction	Description
None	No restrictions applied
Low	Menu access is disabled
Medium	 Menu access is disabled Configurable limit for adjusting heating and cooling setpoints
High	Access is disabled for all settings

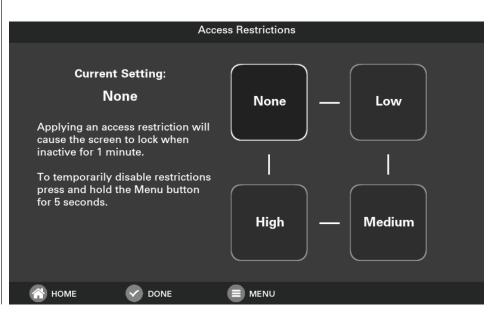

Weather

Navigate to Weather by selecting: Home Screen > Menu > Weather

The weather feature is only available when registered with American Standard Home.

Current Weather To view your local weather, select **Today**. **5-day Forecast** Select **Forecast** to view the 5-day forecast.





Postal Code

To set or change the weather location, select **Postal Code**, enter your zip code or postal code and then select **Done**.

				Postal	l Code				
75707									CLR
q	w	е		t	У	u		o	р
†ABC	а	s	d		g	h		k	I
7123	z	×		v	b	n	m	Sp	ace
🕋 но	ME	A 84	NCK		MENU		Done		

Indoor Humidity

Navigate to Indoor Humidity by selecting: Home Screen > Menu > Humidity

Select the indoor humidity target.

Frost Settings Humidity Setting only applies when the heat is Frost running and may override the target humidity setting. Cooling target 55% **Indoor Humidity** Target Humidity % 5 Suggested 45% - 55% 45% FROST SETTINGS HOME 🔿 номе ⋲ васк

the target humidity setting.

Frost settings only apply when heating is running and may override

System Info

Navigate to System Info by selecting: Home Screen > Menu > System Info

Alerts Active system alerts will be displayed here. For more details please contact your dealer.



Notifications System notifications such as air filter, service and American Standard Home registration reminders will be displayed here.



About

Displays information about all the communicating equipment on the system. Specific details include but are not limited to model number, serial number, software version, installation date, and network information. Details and equipment listed will vary with each system.



System Name Enter a custom, meaningful name for the system.

				System	Name				
Syster	n-943)	ĸ							CLR
q	w				у	u			p
† ABC	а		d	f	g	h		k	
?123		x			b		m	Sp	ace
🚷 но	ME	Ø 0	ONE	•	MENU				

1-Touch Presets

Navigate to 1-Touch Presets by selecting: Home Screen > Menu > 1-Touch Presets

1-Touch Presets provide predetermined Heating and Cooling Set Points for Home, Away and Sleep time periods.




Configuring 1-Touch Presets

- To change the Cooling Set Point, press the COOLING SET POINT to activate the setting. The current System Mode indicator will display this symbol. Use the UP and DOWN Arrows to adjust the Set Point to the desired temperature.
- To change the Heating Set Point, press the HEATING SET POINT area to activate the setting. The current System Mode indicator will display this symbol.


Use the **UP** and **DOWN** Arrows to adjust the Set Point to the desired temperature.

- 3. Repeat the process for Home and Sleep settings.
- 4. Press **DONE**, then **HOME** to return to the Home Screen.

Note: 1-Touch Presets are not available when Scheduling is enabled.

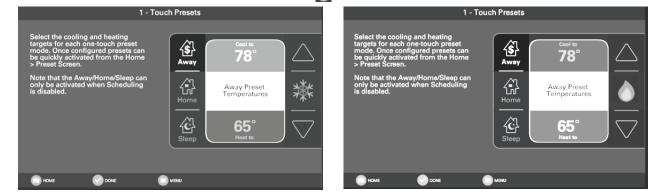

1-Touch Presets (cont.)

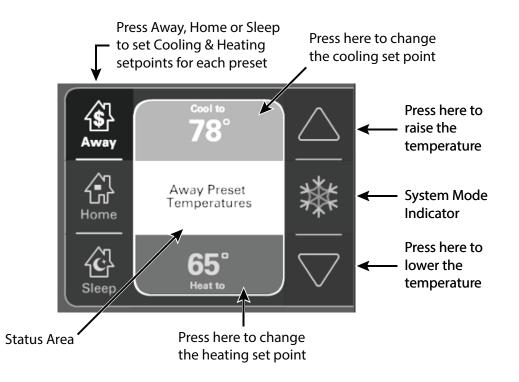

Scheduling

Navigate to Scheduling by selecting: Home Screen > Menu > Schedules

The UX360 Thermostat is capable of adjusting the temperature settings throughout the day according to a user-programmable schedule.

Each day of the week can have its own unique schedule, and each day can have a maximum number of four periods.


Periods define the time of day when the target temperature is adjusted. Each day can have from one to four periods, and each day can have a different number of periods. The Scheduling Screen shows the start time for each Period highlighted across the top row.

Important:

Scheduling must be enabled before a schedule can be defined. To verify that scheduling is enabled, navigate to **MENU** > **SCHEDULES** and verify scheduling is enabled. If enabled, a Weekly Schedule will be displayed. If not enabled, press the **ENABLE SCHEDULE** button.

			١	Weekly Scheo	jule				
MON	8	82		Home 75' 70'		8:00	10:00	Sleep 72' 57'	
TUE	500	00:2		Home 75' 70'		8:00	10:00	Sleep 72' 87'	
NED	80	8		Home 75' 70'		800	10:00 10:00	Skep 72' 97'	
тни	5:00	7:00		Home 75' 70'		8:00		Sisep 72' 87'	
FRI	803	80%		Home 75' 70'		88	10:00 10:00	Skep 72' 87'	
SAT	8	8		Home 75' 70'		88		Skep 72° 67	
SUN	83	82		Home 75' 70'		808	10:00	Sieep 72' 87'	
		10 -							
	-134E	<u> </u>	DISABLE SCHEDULE	••• •					
					Schedu	ıling	g is	currently So	disabled, to enable press the Enable chedule button
					🚷 номе	-	ENA	BLE SCHEDULE	MENU

Changing the Schedule

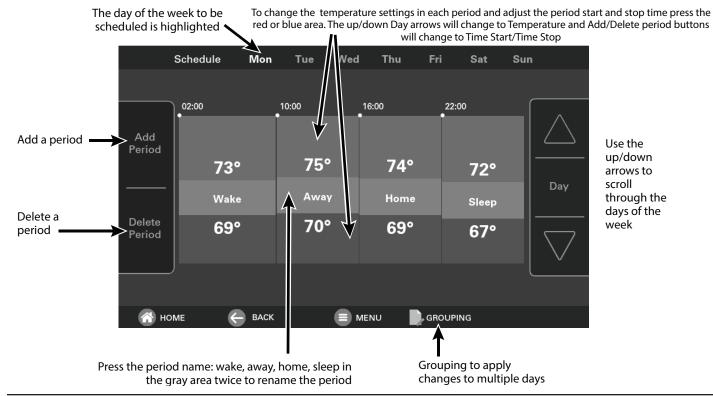

Changing the Schedule (cont.)

Changing Period Start or End Times


- 1. Press anywhere in a Period to make it active. Other Periods will dim and the Start and End times for this Period will be in black boxes at the top of the screen.
- Press TIME START or TIME END and adjust the time on the screen. NOTE: The UX360 uses intelligent technology and will not allow setting an illogical start or end time. Periods must be at least 30 minutes in duration.

Changing Period Set Points

- 1. Press the active Period's Cooling or Heating Temperature Set Point.
- 2. Adjust the Set Point using the **UP** or **DOWN** arrows.

Changing the Period Name


- 1. Press the **PERIOD NAME** (Wake, Away, etc.).
- 2. Select a predefined name or press **NEW** and select **NEXT**.
- 3. If selecting a new name, enter the name using the on-screen keyboard.
- 4. Press NEXT.

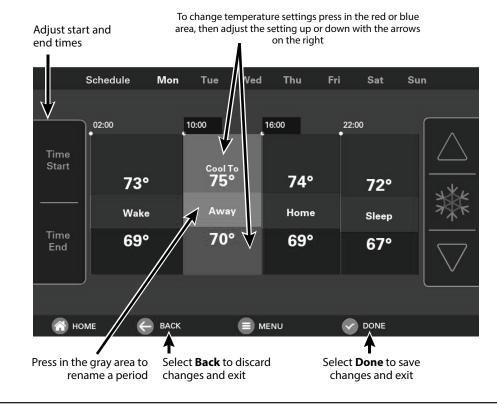

Adding Periods

Adding Periods

- 1. Select **ADD PERIOD**, the Add Period Screen is displayed.
- 2. Press the green circle where you would like to insert a Period.
- 3. Choose a name for the new Period or select New to define a **Custom Name** and select **NEXT**.
- 4. If selecting a new name, enter the name using the on-screen keyboard.
- 5. Select NEXT.

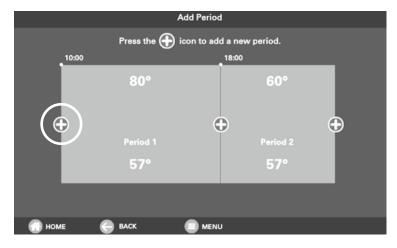




Deleting Periods

Deleting Periods

- 1. From the Schedule Screen select **DELETE PERIOD**, the Delete Periods Screen is displayed.
- 2. Press the **TRASH CAN** icon in the Period(s) you wish to delete.
- 3. Select **DONE** to save your changes and return to the Schedule Screen. The changes should be reflected in the display.

Select one of the trash cans to delete that period.

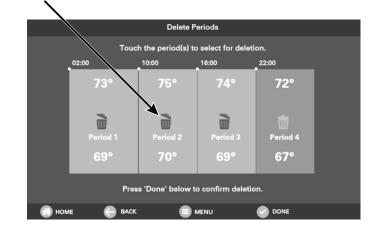

Network Connection

Navigate to Network Settings by selecting: Home Screen > Menu > Settings > Network

Please connect your American Standard Link system to your home internet connection for remote and diagnostic access.



Turn Wireless to **ON** and then select **Connect to WiFi Network**.

Network	k Setup
Connected to: Home Network	Wireless Off/On 🛛 🞯
Corners to Wir Network Network Degrades	Network Details IP Address: 192.081.4 Default Gasway: 192.081.1 Subrect Mask: 255.255.0 DOS 112.081.1 ONS 2: DOS 3: SBD: Home Network Security Type: wpia, wpia? NAC: Address:
🚯 HOME 🕜 DONE 🗐	MENU



Select your network.

		Available Networks
atl	ĥ	Home Network
atl	ĥ	Home >
	ĥ	VeryBad
.al	ĥ	Simon
Add /	Hid	lden Network
- 💮 I	OME	🖉 DONE 🔳 MENU



Enter the password and select **CONNECT**.

				Enter Pa	assword				
qwert								◀	CLR
									p
† ABC									
7123							m	Spa	ю
💮 но	ME	- 🕐 -	ANCEL	•	MENU	(🛞 CONNE	ст	

Mobile App Registration

To control your home climate system from your web enabled smartphone, tablet or computer go to www.asairhome.com or use your mobile app to setup an American Standard Home account. Download the American Standard Home mobile app from the Google PlayTM Store or App Store[®], then launch the app. If you already have an account, log in and select **CONNECT NEW DEVICE.**

Log In Explore Demo		American Standard. Marine & Ale Conditionine
		Log In
	Sign Up Now	Explore Demo
Sign Up Now		Sign Up Now

Select **SIGN UP NOW** to set up an account or select **LOG IN** to log in to existing account.

Create Group	shit. D	 Ensult American Standard* er Trane*onna. Ensure your thermostat is connected to your home's WiFi network. The next step in this process will generate a 5-dipti code for you to enter at your thermostat to connect it to American Standard* Home Enable my HVAC Dealer to see diagnositic information about my HVAC system, as well as my name and home address. 	
Connect New Device	NEW DEVICE.	Continue Navigate to the enrollment screen on your controller	Select CONTINUE
C Z-Wave Device	<u>></u>	Enter the 5-digit code below when prompted	
And see Made and Departmentation		95200	
Sensor	>	0.57	
Andersen Wireless Open/Closed Sensor	>	9:57	
Trane® or American Standard® smart thermostat: 824, 850, or 1050 model	>		
Trane® or American Standard® smart thermostat: 724 model	>		The mobile app
農農 System Cantroller	\rightarrow		will generate a Pi
s∕⊇ Nexia Camera	Select System	Cancel	Code. Record the Pin Code.

Mobile App Registration (cont.)

License Agreement

Enroll in American Standard® Home Systems

Your American Standard LINK comes equipped with remote climate access from American Standard® Home Systems:

Control your home climate from your smartphone
 View local weather
 Receive sierts

Go to www.asairhome.com to set up your account before proceeding.



Return to the UX360 control and select NEXT.




Enter the Pin Code and select **NEXT**.



Page 1

Read the License Agreement, then ACCEPT or DECLINE.

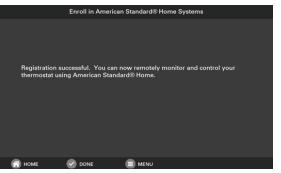

Registration successful. Select DONE.

Adding/Removing Devices

To Add or Remove Z-Wave[®] Devices select: Home Screen > Menu > Smart Home

Adding Z-Wave Devices

- 1. From the **HOME** Screen, select **MENU**, then select **Smart Home.**
- 2. Select **ADD DEVICE** and follow the device manufacturer's instructions for setting the Z-Wave device into learn mode.



3. Select **NEXT** if a list of security types is displayed.

Security Types
This device supports these security types.
Access Control
Authenticated
Unauthenticated
Please select Next to continue.
- NEXT

 If prompted, enter the 5-digit DSK PIN Code for the device being added and then press ACCEPT. This PIN Code can usually be found on the back of the device, on the box, or in the device's instruction manual.



Removing Z-Wave Devices

- 1. From the **HOME** Screen, press **MENU**, then select American Standard Home.
- 2. Select **REMOVE DEVICE** and follow the manufacturer's instructions for setting the Z-Wave device into learn mode. You will have four minutes to set the device into learn mode after selecting the **REMOVE DEVICE** button.

Advanced Z-Wave Settings

Select **ADVANCED** for additional Z-Wave functions including unregistering your bridge from American Standard Home or factory resetting your bridge. See the Advanced Z-Wave Settings section for more information.

Update Network

Select **UPDATE NETWORK** to update the network of your bridge. Updating the network can generate a lot of Z-Wave traffic over the network and can take up to 15 minutes to complete.

Adding Devices (via mobile app)

Alternatively, your UX360 allows you to add Z-Wave devices using the American Standard Home app on your mobile device.

Adding Z-Wave Devices

- 1. Start the American Standard Home app.
- 2. Select the menu button in the top left corner.
- 3. At the bottom of this slide out menu, select **Connect New Device.**

200 200	Dashboard	4
A	Alerts	
×	Automations	P
≣	Events	
Ø	Geofences BETA	
ଷ	Videos	
	News	7
*	Settings	sors
0	Support & Feedback	
	Create Group	
T	Connect New Device	1.

4. Select Z-Wave Device.


	= Connect New Device	
	Choose a Device	
1	R Z-Wave Device	>
	Andersen Translator	>
	ा के Trane or American Standard WiFi बिर्के Thermostat	>
	😹 724 Thermostat	>
	🕫 Nexia Camera	>
l		

 Select Continue and then prepare the device for inclusion by following the device manufacturer's instructions for setting the Z-Wave device into learn mode.


	-Wave Device	
Prepare yo inclusion. include yo	our Z-Wave device for You will have 90 seconds to ur device.	C
	Contir	iue
	Contir	iue



6. Select **Grant Keys** if a list of security keys is displayed.

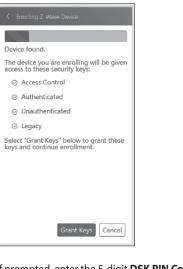

 If prompted, enter the 5-digit DSK PIN Code for the device being added and select Accept DSK. This PIN Code can usually be found on the back of the device, on the box, or in the device's instruction manual.

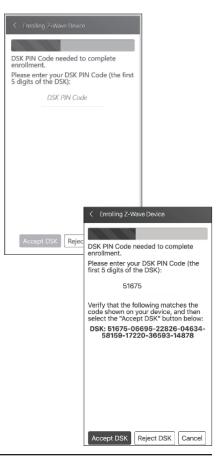

Advanced Bridge Settings

Navigate to Advanced Screen by pressing: Home Screen > Menu > Smart Home > Advanced

The **Advanced** screen contains three very powerful functions. Each of these functions is very specific and should be approached with a measure of caution.

Unregister

Removes the bridge from American Standard Home. All remote control features will be disabled.

Factory Reset

Resets all Z-Wave information and removes all devices from the bridge. If this bridge is the primary controller for your network, resetting it will result in all the devices in your network being removed. Following the reset, it will be necessary to remove and then add all of the devices back to your network.

Bridge Information

If this bridge is being used as a secondary or inclusion controller in the network, please reset this bridge only in the event that the primary controller is missing or otherwise inoperable.

Learn

To add the bridge to an existing network, follow your primary controller's instructions to put the primary controller into Add Mode. Then press the Learn button on the bridge.

This function copies a new Z-Wave network to the bridge from another controller. This function is not allowed if your bridge is a primary controller with included Z-Wave devices.



When adding the bridge to an S2 controller, the S2 DSK will be displayed after pressing the Learn button on the bridge.



Other Features

Automatic Software Updates

To take full advantage of the features and benefits of the UX360 Smart Thermostat, the latest software revision should be installed.

An internet connection to the SC360 System Controller is required for software updates. When the SC360 is connected to the Internet, software updates to the installed communicating equipment will occur automatically and do not require user intervention. All communicating equipment on the system will be upgraded, including the UX360, SC360, indoor and outdoor units.



About American Standard Heating and Air Conditioning American Standard has been creating comfortable and affordable living environments for more than a century. For more information, please visit www.americanstandardair.com.

The manufacturer has a policy of continuous data improvement and it reserves the right to change design and specifications without notice. We are committed to using environmentally conscious print practices.

All trademarks referenced are the trademarks of their respective owners. Google is a trademark of Google LLC. Z-Wave is a trademark of Z-Wave Alliance.

Representative-only illustrations included in this document.

012-5063-01B-EN 24 Feb 2022 Supersedes 012-5063-01A-EN (August 2021)